



**1** Decide where the Showerlay is going to be positioned and make sure the area is clear and dirt free. Lay the Showerlay down into place.



**2** Be aware of where the floor joists are and position the Showerlay with the hole in between them. Then draw around the edges of the wooden floor using a pencil.



**3** Cut out the floor the section using an electric Jigsaw.



**4** Lower supporting shelves between the joists (minimum of 18mm). Make sure that the support is flush with the joists and fully supporting. Be aware of floor level.



**5** Place the support into position and check again that the floor is level in all directions.



**6** Lay the Showerlay down onto the supporting shelves and mark out the hole position with a pencil.



**7** Sit the drain upside down over the pencil mark. Now draw a further pencil mark around the Dallmer drain (plus 10mm). Allow room for the drains knuckle.



**8** Cut out the key hole shape drawn and place in drain. Connect with pipework using a solvent weld. Then place the rubber ring onto the top of the drain.



**9** Once again lay down the Showerlay and check all lines up and that all it is level.



**10** Using a full bed of flexible cement based tile adhesive, fix the Showerlay to the floor. Continue checking it is level in all directions.



**11** Place the plastic ring through the hole and into the drain.



**12** Make sure to use the tool provided to screw the plastic ring as tight as it will possibly go.




**13** Place the hair trap inside.



**14** Use 'Marmox Acrylic Sealant' to fix 'Marmox Waterproof Corners' into position. Make sure to push fully into the corners.



**15** Use 'Marmox S/A Waterproof Tape' around all the edges and over the corner pieces.

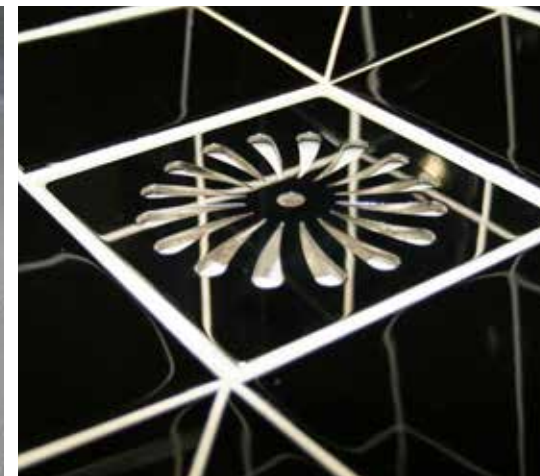

**16** Finish off by tiling and placing in a drain grill from the Marmox range.